


C80


PASSALAMIERA DIRITTO CALZAM.
BULKHEAD STRAIGHT PUSH ON

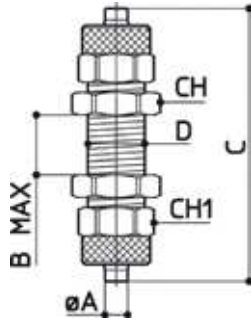

CODICE	A	B	C	D	CH	CH1	GR
C80005	5/3	8.5	40	M7x0.75	8	8	22
C80015	15/12.5	8.5	58	M20x1	24	22	109
C80010	10/8	10	51	M14x1	17	16	55
C80012	12/10	10	52	M16x1	19	19	79
C80006	6/4	10.5	48	M10x1	14	12	33
C80008	8/6	12	50	M12x1	17	14	42

C38

TESTINA ORIENTABILE-I CALZAM.
BANJO ELBOW RING PUSH ON

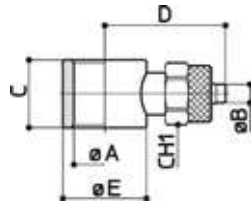


CODICE	A	B	C	D	E	CH1	GR
C38505	5.1-M5	5/3	9	17	9	8	7
C38805	9.8-1/8	5/3	14.5	22.5	14	8	15
C38506	5.1-M5	6/4	9	18	9	9	8
C38806	9.8-1/8	6/4	14.5	24	14	12	20
C38406	13.3-1/4	6/4	14.5	26	18	12	25
C38808	9.8-1/8	8/6	14.5	24	14	14	22
C38408	13.3-1/4	8/6	14.5	26	18	14	26
C38410	13.3-1/4	10/8	14.5	28	18	16	30

► Per il montaggio della testina utilizzare gli articoli in raccorderia serie metallo:
► Use the following articles of our metal range for the assembling of the head:
35-35RP-C35-36-C36-37-300-C300

C39

TESTINA ORIENTABILE-T CALZAM.
BANJO TEE RING PUSH ON

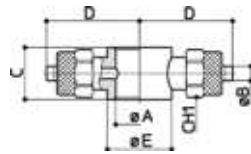


CODICE	A	B	C	D	E	CH1	GR
C39805	9.8-1/8	5/3	14.5	22.5	14	8	19
C39806	9.8-1/8	6/4	14.5	24	14	12	29
C39406	13.3-1/4	6/4	14.5	26	18	12	33
C39808	9.8-1/8	8/6	14.5	24	14	14	32
C39408	13.3-1/4	8/6	14.5	26	18	14	37
C39410	13.3-1/4	10/8	14.5	28	18	16	44

► Per il montaggio della testina utilizzare gli articoli in raccorderia serie metallo:
► Use the following articles of our metal range for the assembling of the head:
35-35RP-C35-36-C36-37-300-C300

CDB

DADO DI BLOCCAGGIO CALZAM.
LOCK NUT PUSH ON

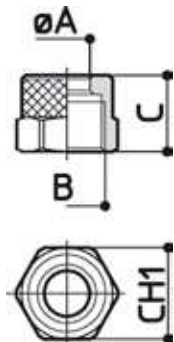

CODICE	A	B	C	CH1	GR
CDB005	5/3	M7x0.75	9	9	2
CDB060	6/4	M8x0.75	9	9	2
CDB006	6/4	M10x1	10	12	4
CDB008	8/6	M12x1	10	14	5
CDB010	10/8	M14x1	11.5	16	7
CDB012	12/10	M16x1	13	19	8
CDB015	15/12.5	M20x1	15.5	22	15